


LG IPECS

Pre-Defined & Custom Text Display Messages

You can select a text message that will display in the LCD display of your coworker's telephones. These messages will also be audibly announced to outside callers who transfer via the auto-attendant. We'll utilize the web portal of the phone system to set these messages.

To Select a Text Message

1) Open your web-browser and input the IP address of your telephone system. You'll be presented with a login screen.

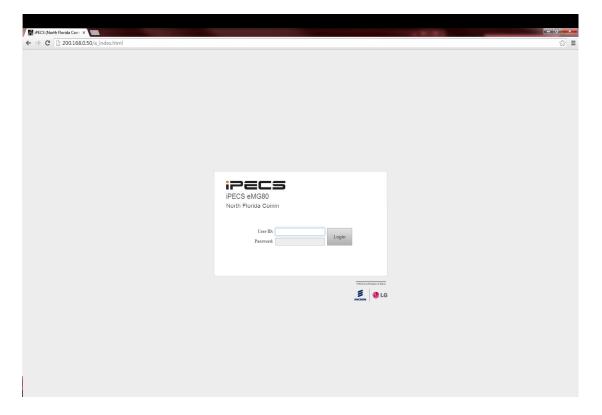

2) Input your extension number and your password. The password is the same one that is used to access your voice-mail.

3) On the left-hand side of the screen, select "Pre Select Message".

| PECS Station Program × | | | _ D X |
|--|---------------------|--|-----------------|
| ← → C 🗋 200.168.0.50/s_index.htm | | | ය |
| IPECS eMG80 | | Change L | anguage Log Out |
| STATION 100 PROGRAM | Station Information | | |
| Station Attributes Station Call Forward | | iPECS | |
| Station Speed Dial | | Station 100 Program | |
| Pre Select Message | | iPECS eMG80 Version : MPB/US86M-1.0Fe MAY/14 | |
| Flex Buttons Station Conference Group System Conference Group Mobile Extension Table Attendant Ring Mode | | | |
| Attendant King wode | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| 0.168.0.50/s_index.html#pgms006 | | Copyright Ericsson-LG Enterprise Co., Ltd. 2014. | |

- Choose the message you want to be displayed to callers. If applicable, add the time or date in the "Attribute" field.
- 5) If you wish to have this message read to outside callers who transfer to your extension via the auto-attendant, change "VSF MESSAGE PLAY TO CO INCOMING CALLER" to "ON".
- 6) Hit "Save" to save your selection.

| → C 200.168.0.50/s_index.h | tml | | | |
|--|---|-------------|-------------------------|---------------------|
| | | | | Change Language Log |
| STATION 100 PROGRAM | Station Information Pre Select Messa | nge X C | | |
| Station Attributes | | | | S |
| Station Call Forward | Index Messages | Attribute | Range | |
| Station Speed Dial | # MESSAGE DEACTIVATED | | | |
| Pre Select Message | 0 STATION CUSTOM MESSAGE | | Max 24 Characters | |
| Flex Buttons | 1 LUNCH RETURN TIME | | hhmm (Must be 4 digits) | |
| Station Conference Group | | | MMDD (Must be 4 Digits) | |
| Station Conterence Group System Conference Group Mobile Extension Table Attendant Ring Mode | © 3 OUT OF OFFICE RETURN TIME | | hhmm (Must be 4 digits) | |
| | @ 4 OUT OF OFFICE RETURN DATE | 1031 | MMDD (Must be 4 Digits) | |
| | 0 5 OUT OF OFFICE RETURN UNK | | | |
| | G CALL TO STATION | | Phone Number | |
| | © 7 IN OFFICE STATION | | Station Number | |
| | 0 IN A MEETING TIME | | hhmm (Must be 4 digits) | |
| | 9 AT HOME | | | |
| | 10 AT BRANCH OFFICE | | | |
| | 11 SYSTEM CUSTOM MESSAGE | | | |
| | 12 SYSTEM CUSTOM MESSAGE | | | |
| | 13 SYSTEM CUSTOM MESSAGE | | | |
| | 14 SYSTEM CUSTOM MESSAGE | | | |
| | 15 SYSTEM CUSTOM MESSAGE | | | |
| | 16 SYSTEM CUSTOM MESSAGE | | | |
| | 17 SYSTEM CUSTOM MESSAGE | | | |
| | 18 SYSTEM CUSTOM MESSAGE | | | |
| | 19 SYSTEM CUSTOM MESSAGE | | | |
| | 20 SYSTEM CUSTOM MESSAGE VSF MESSAGE PLAY TO CO INCOMING | CALLER ON T | | |

Copyright Ericsson-LG Enterprise Co., Ltd. 2014.

To Cancel A Message

Repeat the steps above. In step 4, choose "MESSAGE DEACTIVATED".